

SGRS100-H

DUTCH TONE WIRELESS WALL SOUNDER



GENERAL DESCRIPTION

The Dutch tone wireless wall sounder is an acoustic output device which is activated by a specific command sent from the control panel, through a translator module and other possibly present expander modules, in case of fire or emergency situations; this device provides a European tone set. The communication between the sounder and the translator / expander module(s) is wireless via the 'Sagittarius' bidirectional protocol. This sounder allows the installer to choose among three different tones and to set the volume by directly and manually acting on the device.

TECHNICAL SPECIFICATIONS *****

Operating frequency	868.15 MHz - 869.85 MHz		
Communication range with the translator or the expander *	200 m	In open space	
Radiated power	5 dBm (3 mW)	Typical	
Modulation type	FSK		
Operating frequency channels	7		
Primary and secondary battery **	Type CR123A (3 V & 1.2 Ah)		Estimated battery life: >3 years; remains operational for up to 60 days from first appearance of the low battery warning ***
Approved battery voltage range	2.75V - 3.20V		
Alarm current	70 mA		
Operating temperature range	From -10°C to +55°C		
Max tolerated humidity	95% RH	No condensing	
Ingress protection rating	IP 21C *****		
Sound output volume (adjustable)	between 76 dBA and 100 dBA at max volume depending upon angle and tone selection (refer to volume plots under OUTPUT OPERATIONAL PERFORMANCE SPECIFICATIONS)		

*** Ideal operating range: may vary consistently according to environmental conditions.**

**** When a low battery condition is indicated, both, main and secondary, batteries must be changed altogether.**


***** This lifespan value refers to the device being set with a message transmission period of 12 seconds; tests are not considered in this estimation.**

****** Type A for indoor use only.**

******* Check latest version of document TDS-SGRSX for further data, obtainable from your supplier.**




Picture 1 - General overview of the device and its opening key

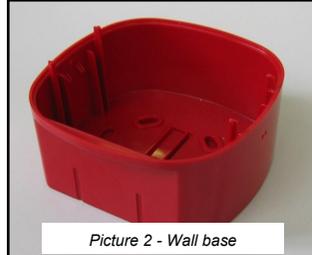

Picture 2 - Wall base



Picture 3 - Sounder device

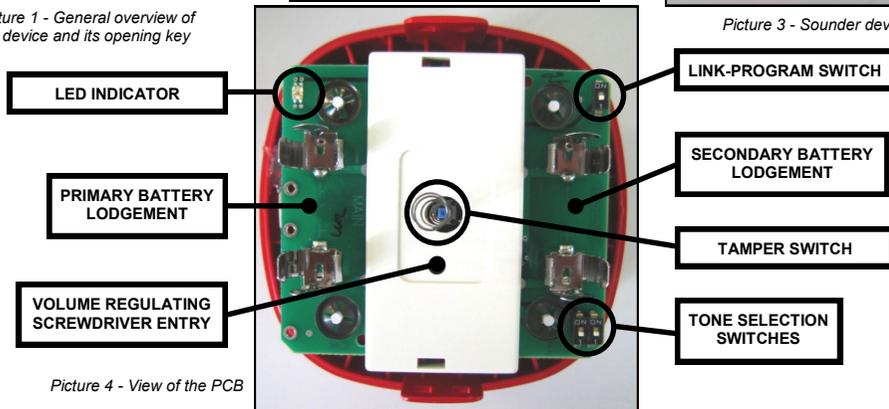

Picture 4 - View of the PCB

SOUNDER DEVICE REMOVAL FROM THE WALL BASE

In order to remove the sounder device from the wall base, the opening key must be inserted into the two holes present on the base; hold only the base firmly with one hand and insert and push the key into its holes with the other, until the device unblocks. During this operation be careful not to break the two pins of the key and not to drop the device on the floor.

KEY TO REMOVE THE SOUNDER DEVICE FROM ITS WALL BASE



Picture 5 - Sounder device removal from the wall base

SOUNDER VISUAL LED INDICATOR

This device is equipped with a bi-colour LED (red/green) that provides visual indication for functional conditions and battery levels as indicated in table 1. The indicator is positioned on the device's PCB on the back of the sounder device (picture 4).

Device Status	Green LED	Red LED
Switching into operating mode	Short blinks	-
Switching into programming mode	-	4 short blinks
Normal mode	-	-
Main battery fault (low level)	-	Blinking (0.1 second on / 5 seconds off)
Secondary battery fault (low level)	Blinking (0.1 second on / 5 seconds off)	-
Both batteries fault	Sequential bicolor blinking (0.1 second on / 5 seconds off)	

Table 1

DEVICE'S POWER SUPPLY AND LINKING

The linking operation permits the configuration of this device on the translator module. The linking operation described below does not change if made directly from the translator module or from the PC configuration program:

- 1) Verify that the secondary battery is present; if not insert the battery into its housing (picture 4), **with the poles correctly oriented as indicated on the PCB.**
- 2) Move the "link-program" switch to position ON.
- 3) Insert the main battery into its housing (picture 4), **with the poles correctly oriented as indicated on the PCB.**

Ensure that both battery polarities are correct.

The visual LED indicator switches green once, then four times red (programming mode) and will, successively, turn off. This indicates that the device is ready to be linked to the translator module.

- 4) Move the switch to position 1 to trigger the communication between the device and the translator. The green LED switches on once, then it blinks many times (operating mode), and, finally, after alternating green-red for one second, the indicator turns off: this indicates that the linking procedure has been performed correctly and the device has programmed itself. The sounder is linked and all the parameters (address, system code etc.) necessary to work correctly are stored. If the LED remains switched on the red light it means that the linking operation failed. In this case remove the main battery, switch over alternatively the ON / 1 switch a few times in order to discharge the internal capacitor and then start again from point 2).

IMPORTANT NOTE! Programming is considered to be completed successfully only if there is an indication of programming success on the device and on the translator or on the window of the PC configuration program.

COMMUNICATION QUALITY ASSESSMENT

It is possible to assess the wireless communication quality of this device with the system by using an in-built testing feature. After a successful linking operation, by switching over the "link-program" switch on the ON position, the LED indicator will start blinking according to table 2.

Always remember to reposition the switch to 1 after the assessment operation: device will NOT work operatively while the switch is positioned on the ON position.

Communication quality	Assessment	Device's indication
No connection	Fail	Two red blinks
Link margin is less than 10 dB	Poor	One red blink
Robust communication with link margin from 10 dB to 20 dB	Good	One green blink
Robust communication with link margin over 20 dB	Excellent	Two green blinks


Table 2

DEVICE PLACEMENT

For specific information regarding detector and device's spacing, placement and special applications refer to your specific national standards.

It is strongly advised to mount the device as far as possible from metal objects, metal doors, metal window openings, etc. as well as cable conductors, cables (especially from computers), otherwise the operating distance may greatly drop. The device should not be installed near electronic devices and computer equipment that can interfere with the reception's quality.

- 1) Select the position of the device before installing it. **Verify, from that position, that the communication between the device and the translator or the expander is correctly established and working (see the COMMUNICATION QUALITY ASSESSMENT paragraph).**
- 2) Install the wall base in the selected position with the provided screws (picture 6).
- 3) Set the device's tone and output volume; see the following paragraphs.
- 4) Test the sounder (see the following paragraphs), then install securely the sounder device onto the fixed wall box.

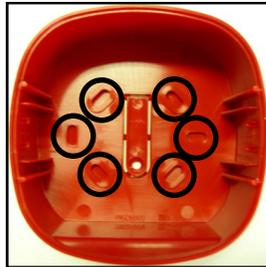

Picture 6 - Wall fixing screw entry points on the wall base

OUTPUT TONE SELECTION

Sounder's output must be selected by using the two tone selection switches (picture 4): **orientate the back of the sounder as in picture 4**. Select, by changing over the switches, the desired tone by referring to table 3; the first indicated switch in the sequence is the left one and the successive is the right one ("Switches position" column of the tables).

Switches position*	Pattern	Frequency	Rate	Main application
0 (switches: ON - ON)	Continuous tone **	990 Hz	Steady	BS fire tone
1 (switches: ON - OFF)	Slow whoop tone **	500 Hz to 1200 Hz	3 s sweep, 0.5 s silence	Dutch fire tone
2 (switches: OFF - ON)	Sweep (DIN) tone **	1200 Hz to 500 Hz	1 Hz	DIN tone
3 (switches: OFF - OFF)	Continuous tone **	990 Hz	Steady	BS fire tone

* 'OFF' position corresponds visually on the device to '1'.

Table 3 - Tone selection reference table

** These tones in bold are EN 54-3 certified.

VOLUME REGULATION

In order to adjust the sounder's volume insert a screwdriver into its entry hole situated on the back of the sounder device (picture 4); turn the screwdriver clockwise / anticlockwise to adjust the volume.

TAMPER DETECTION FEATURE

This device is provided with a tamper detection switch-spring system (picture 4), and, in case of removal of the sounder from its wall base, it sends a tamper detection message to the control panel. For this reason assure that the sounder device is well inserted onto its wall base and securely closed.

BATTERY FAULTS

If a battery fault condition is detected on this device, a fault message is sent to the control panel via translator / expander. This kind of fault condition is locally signaled by the device's visual LED indicator (see table 1).

TESTING

In order to test the functionality of the installed sounder, the following test must be performed: activate an alarm condition on the control panel (by a call-point or sensor in the installed system): the control panel will transmit an activation message to the device via translator / expander and activate its output.

After each test the device must be reset by the specific command on the control panel or on the translator (see the RESET paragraph).

If the test fails, check whether the batteries are charged, if mistakes were done previously or even if the system is activated. If the device's functionality is hopeless, send back the device to your distributor for repair or substitution.

All devices must be tested after installation and, successively, on a periodic basis.

RESET

To reset the sounder device from an activated or a fault condition, it is necessary to:


- 1) solve the cause of the abnormal condition
- 2) send the reset command from the control panel or from the translator.

Performing sequentially those two operations, the sound output and/or fault condition will deactivate / resolve.


MAINTENANCE

- 1) Before starting any maintenance work, isolate and disable the system, in order to avoid accidental and unwanted fault / tamper detection conditions.
- 2) Remove the sounder from its wall base.
- 3) Perform the planned necessary maintenance operations (e.g. battery substitution).
- 4) After the device has been serviced, reinstall correctly the sounder block onto its wall base, re-apply power to the system and check correct operation as described under the TESTING paragraph.


OUTPUT OPERATIONAL PERFORMANCE SPECIFICATIONS

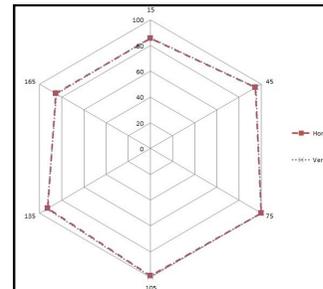

Picture 7 - Slow whoop dB(A) output

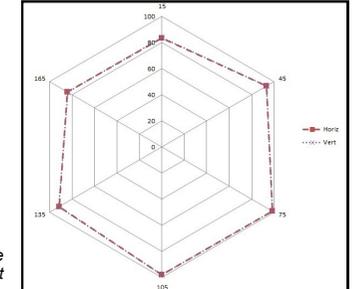

Picture 8 - DIN tone dB(A) output

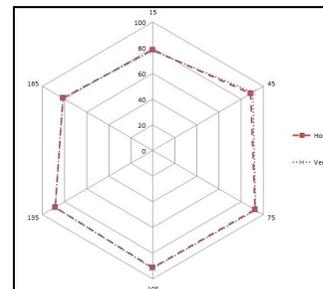

Picture 9 - Continuous tone dB(A) output

WARNINGS AND LIMITATIONS

Our devices use high quality electronic components and plastic materials that are highly resistant to environmental deterioration. However, after 10 years of continuous operation, it is advisable to replace the devices in order to minimize the risk of reduced performance caused by external factors. Ensure that this device is only used with compatible control panels. Detection systems must be checked, serviced and maintained on a regular basis to confirm correct operation.

Smoke sensors may respond differently to various kinds of smoke particles, thus application advice should be sought for special risks. Sensors cannot respond correctly if barriers exist between them and the fire location and may be affected by special environmental conditions.

Refer to and follow national codes of practice and other internationally recognized fire engineering standards.

Appropriate risk assessment should be carried out initially to determine correct design criteria and updated periodically.

WARRANTY

All devices are supplied with the benefit of a limited 3 year warranty relating to faulty materials or manufacturing defects, effective from the production date indicated on each product.

This warranty is invalidated by mechanical or electrical damage caused in the field by incorrect handling or usage.

Product must be returned via your authorized supplier for repair or replacement together with full information on any problem identified.

Full details on our warranty and product's returns policy can be obtained upon request.



ARGUS SECURITY S.R.L.
Via del Canneto, 14
34015 Muggia (TS)
Italy

11

SG0410CPR20130701

EN 54-25:2008

EN 54-3: 2001 + A1:2002; +
A2:2006

SGRS100-H

For use in compatible fire
detection and alarm system

Type A for indoor use only